

# PDU – PORTABLE DISPENSING UNITS



p/n AT20049  
**CLEAN** with  
MSC (Blue)



p/n AT20048  
**DISINFECT**  
with MM  
(Yellow)



# PDU – PORTABLE DISPENSING UNITS – SHOWER CLEANING- SPRAYING



**GENERATE**



**CONNECT to  
water supply**



**TRANSPORT**



**CONNECT to  
Concentrate**



**CLEAN  
with MSC  
(Blue)**



**RINSE**



**DISINFECT  
with MM  
(Yellow)**

# PDU – PORTABLE DISPENSING UNITS – FILLING EQUIPMENT/BUCKETS - OPTION






# INSTRUCTION BULLETIN

No. DM20113  
Machine: os3  
Published: 07-2017  
Rev. 00

**NOTE: DO NOT DISCARD the Parts List from the Instruction Bulletin. Place the Parts List in the appropriate place in the machine manual for future reference. Retaining the Parts List will make it easier to reorder individual parts and will save the cost of ordering an entire kit.**

Installation instructions for kit number AT20048 / AT20049 - Use same procedure to install both kits



## PROTECT THE ENVIRONMENT

Please dispose of packaging materials, used machine components such as batteries and fluids in an environmentally safe way according to local waste disposal regulations.

Always remember to recycle.

## PREPARATION:

1. Confirm all components are in the shipment of the kit.

Trigger sprayer

72 in. (1829 mm) hose

Quick disconnect fitting

PDU body (Yellow or Blue)

Spray nozzle tip

Bottle / equipment fill nozzle



AT20048 – Orbio os3 PDU – MultiMicro (Yellow)



AT20049 – Orbio os3 PDU – MultiSurface Cleaner (Blue)

**INSTALLATION:**

1. Connect hose to water supply (3 options).
- a. Direct to faucet – one location filling bottles / equipment.



- b. Quick disconnect to faucet – multiple location filling bottles / equipment.



- c. Direct or quick disconnect to customer hose – spraying shower stalls, large areas, etc...



2. Connect cap (yellow or blue) to transport container (yellow or blue).



**BOTTLE / EQUIPMENT FILL:**

1. Connect bottle / equipment nozzle to PDU body (yellow or blue).
2. Completely squeeze sprayer trigger to ensure correct dilution.
3. Fill spray bottles / equipment.



**SPRAYER - CLEAN WITH MULTISURFACE CLEANER (MSC) (BLUE):**

- 1. Thread the spray nozzle tip onto PDU body (blue).



- 2. Completely squeeze sprayer trigger to ensure correct cleaning solution / water mix.



- 3. Cover surface to be cleaned with MSC. Allow the MSC to soak.



- 4. Scrub surfaces as necessary to remove soil.



**SPRAYER - DISINFECT WITH MULTIMICRO 200 (MM200) (YELLOW):**

*NOTE: If area to be disinfected is visibly dirty, clean with the MSC before disinfecting.*

1. Thread the spray nozzle tip onto PDU body (yellow).



2. Completely squeeze sprayer trigger to ensure correct cleaning solution / water mix.




3. Thoroughly wet surface(s) to be disinfected with MM200. Allow the MM200 solution to soak on the surfaces for 10 minutes. Remove solution with a mop, cloth, or sponge, vacuum pick up, or allow to air dry.



**SPRAYER - RINSE:**

1. Disconnect the PDU body from the trigger sprayer and rinse surfaces with water from supply.

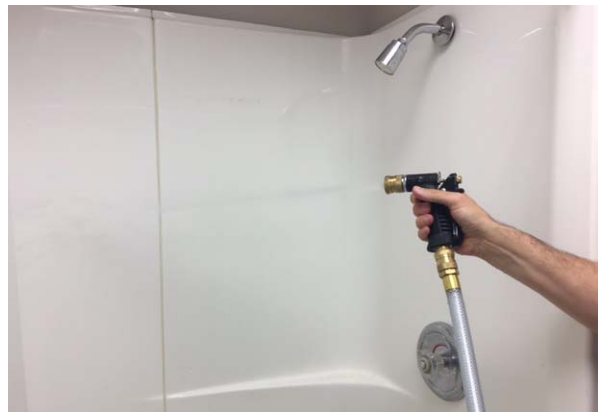

---

TENNANT COMPANY  
P. O. Box 1452  
Minneapolis, MN 55440-1452