



ORBIO® 5000-Sc SINGLE AND DUAL AUXILIARY TANKS




Double or triple your available Orbio® 5000-Sc solution volume with auxiliary tanks

Create, store, and dispense an additional 500 L or 1.000 L of 5000-Sc solution by adding one or two auxiliary tanks to the 5000-Sc. These tanks are:

- Purpose-designed for use with the 5000-Sc
- Durable
- Easy to install

Install one or two tanks when peak demand exceeds the standard 5000-Sc 454 L tank capacity on a regular basis, such as when filling multiple large cleaning machines or solution transport carts at one time.



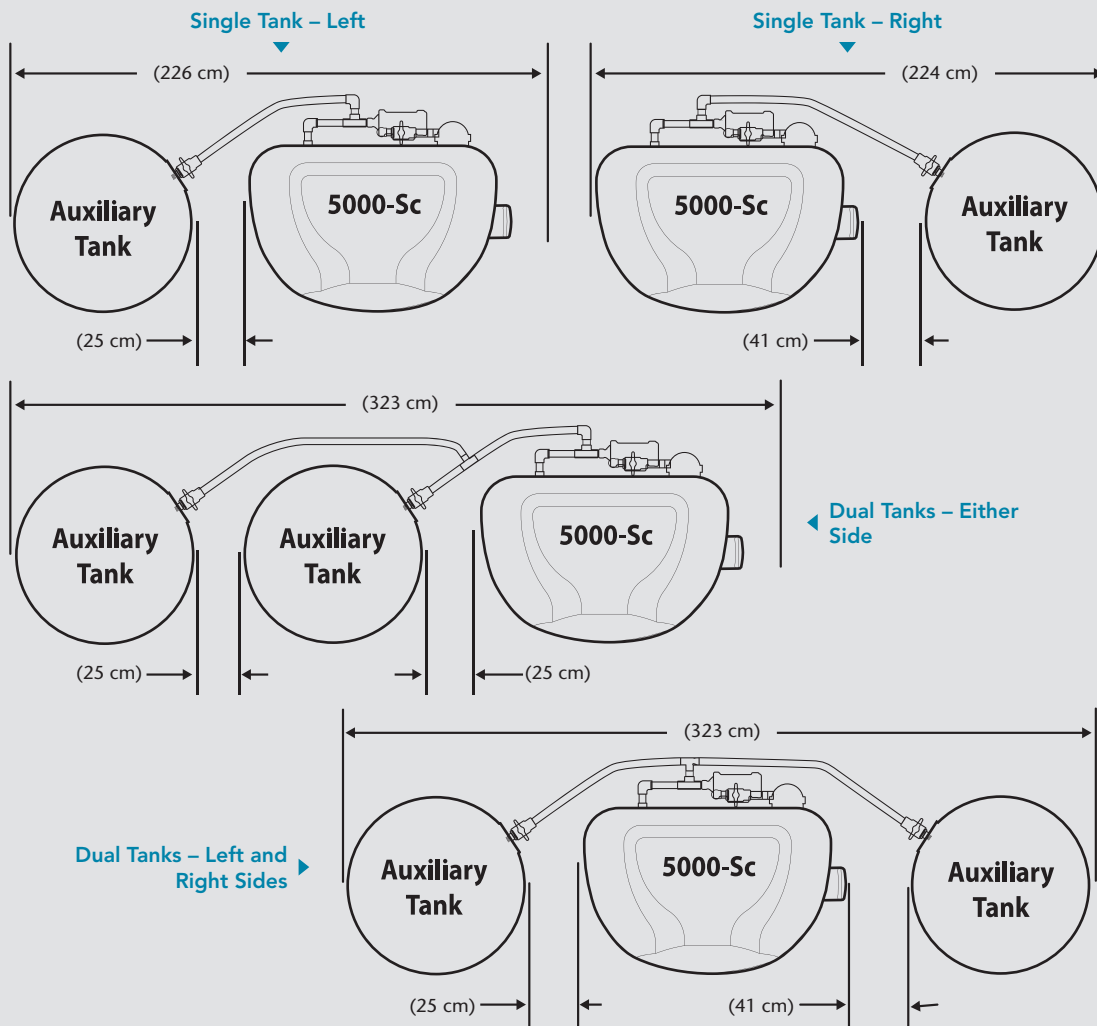

5000-Sc unit and any auxiliary tanks should be installed on an even surface so that the bases of a complete installation are at the same level. A 40,64 cm gap is required between an auxiliary tank and the right (inflow filter) side of the tank to allow for access to the inflow filter.

Single and Dual Auxiliary Tanks

STANDARD CONSTRUCTION

Expansion tank	6 mm wall thickness polyethylene, 400 mm diameter vented lid, clear with liter markers
Connection hose	25 mm ID PVC
Fittings/Ball valves	PVC
Hose clamps	Worm-drive, stainless steel

DIMENSIONS/WEIGHT/CAPACITY

Height	1.550 mm
Diameter	700 mm
Weight (empty)	25.5 kg
Weight (filled)	538 kg
Usable capacity	500 L

Each tank comes complete with connection hose, fittings, ball valve, clamps, safety/regulatory labels, and installation instructions. For dual tank configurations, order two tanks - all necessary fittings and hoses are shipped with the tanks. Specifications subject to change without notice.

To learn more about the Orbio® Solutions Transport Cart and other innovations in cleaning, contact us today.

TENNANT UK CLEANING SOLUTIONS LTD
 Gladstone Road
 Northampton NN5 7RX
 UNITED KINGDOM
 Tel: 0800 111 4402 (local rate UK only)
 Tel: 01604 583191
 Fax: 0845 052 9349
 Email: sales.uk@tennantco.com
 Email: enquiries@tennantco.com

TENNANT EUROPE NV
 Plantin & Moretuslei 220
 2018 Antwerp
 BELGIUM
 Tel: +32 3 217 94 11
 Fax: +32 3 217 94 19
 E-mail: europe@tennantco.com