




Double or triple your available Orbio® 5000-Sc solution volume with auxiliary tanks

Create, store, and dispense an additional 135 gal / 511 L or 270 gal / 1,022 L of 5000-Sc solution by adding one or two auxiliary tanks to the 5000-Sc. These tanks are:

- Purpose-designed for use with the 5000-Sc
- Durable
- Easy to install

Install one or two tanks when peak demand exceeds the standard 5000-Sc 120 gal / 454 L tank capacity on a regular basis, such as when filling multiple large cleaning machines or solution transport carts at one time.

Multiple Configuration Options

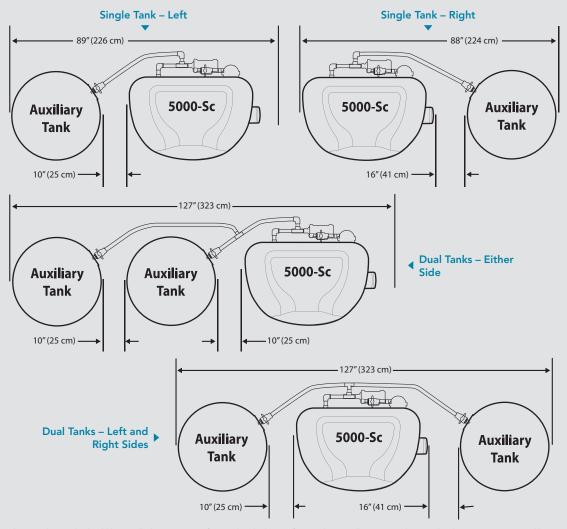

5000-Sc unit and any auxiliary tanks should be installed on an even surface so that the bases of a complete installation are at the same level. A 16" gap is required between an auxiliary tank and the right (inflow filter) side of the tank to allow for access to the inflow filter.

Single and Dual Auxiliary Tanks

| STANDARD CONSTRUCTION | |
|----------------------------|--|
| Expansion tank | 0.25 in / 6.4 mm wall thickness polyethylene, 8 in / 203 mm diameter vented lid, clear with gallon markers |
| Connection hose | Braided 1 in / 25 mm ID PVC |
| Fittings/Ball valves | PVC |
| Hose clamps | Worm-drive, stainless steel |
| DIMENSIONS/WEIGHT/CAPACITY | |
| Height | 65 in / 1,651 mm |
| Diameter | 28 in / 711 mm |
| Weight (empty) | 56 lbs / 25.5 kg |
| Weight (filled) | 1,183 lbs / 538 kg |
| Usable capacity | 135 gal / 511 L |

Each tank comes complete with connection hose, fittings, ball valve, clamps, safety/regulatory labels, and installation instructions. For dual tank configurations, order two tanks - all necessary fittings and hoses are shipped with the tanks. Specifications subject to change without notice.

To learn more about the Orbio® 5000-Sc Single and Dual Auxiliary Tanks and other innovations in cleaning, contact Orbio today.

Orbio® 5000-Sc Single and Dual Auxiliary Tanks Sellsheet 2/12 @2012 The Tennant Company logo and other trademarks designated with the symbol "®" are trademarks of Tennant Company registered in the United States and/or other countries. Tennant Company's products are sold and serviced through subsidiaries of Tennant Company and distributors.



Orbio Technologies 701 North Lilac Drive Minneapolis, MN 55422 USA +1 800 553 8033 +1 763 540 1315 orbio.com

